

How to Buy

- **Step 1** Select your desired Foot & Cap Style

Combine Cap & Foot styles to craft a design tailored to your vision. **Ensure Cap, Tubing, and Foot diameters are consistent for a seamless fit.**

Use tubing length to specify height.

- **Step 2** Identify Mounting Style




Through Bolt Mounting Plate

- **Step 3** Specify your Finish


Choose between one of Palmer's [exceptional finish offerings](#)

- **Step 4** Contact Sales to specify your product - be sure to identify:
 - Foot Style
 - Cap Style *optional*
 - Height
 - Mounting Method
 - Finish


PALMER INDUSTRIES
CUSTOM ARCHITECTURAL METALWORK

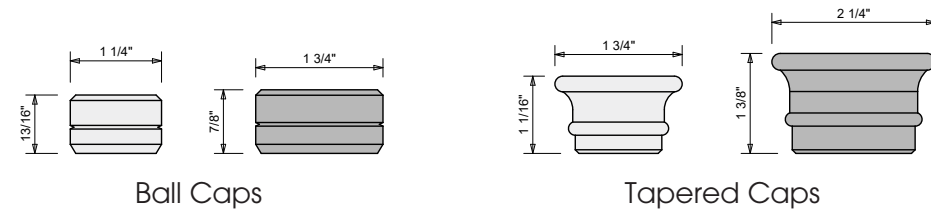


Ball Caps Tapered Caps

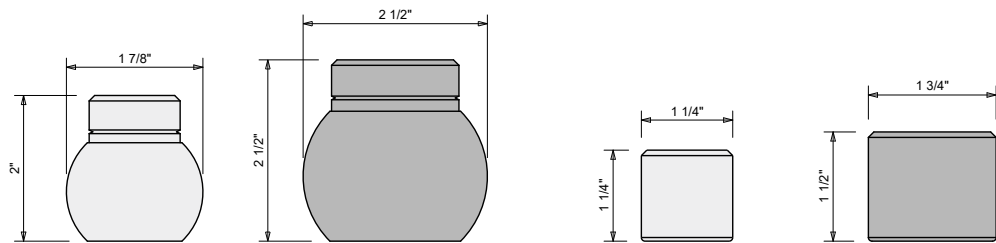


Ball Feet Studio Feet

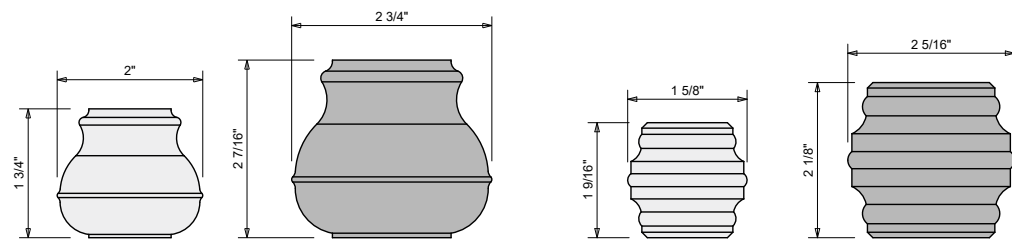


Bun Feet Decorative Feet

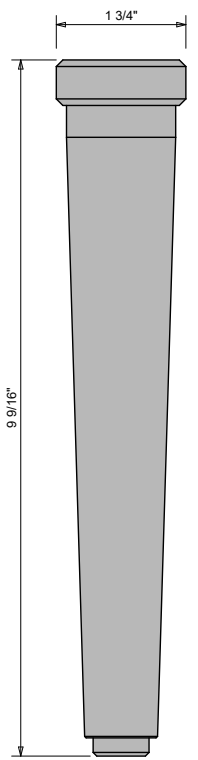

Modern Foot

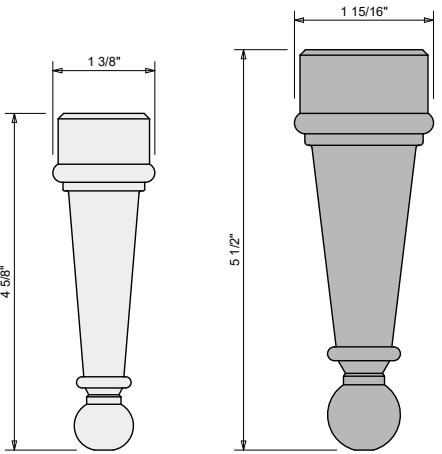

Tapered Feet

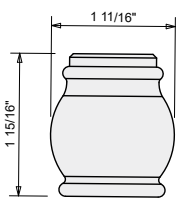


Victorian Foot

FURNITURE FEET


Utilizing our collection of beautifully proportioned vanity feet, combined with our refined top caps, Palmer is able to fabricate exceptional custom furniture feet, sized to meet your specific needs in a wide range of finishes.

Anatomy of a Furniture Foot

*All Palmer Feet must be secured via Mounting Plate or Threaded Rod

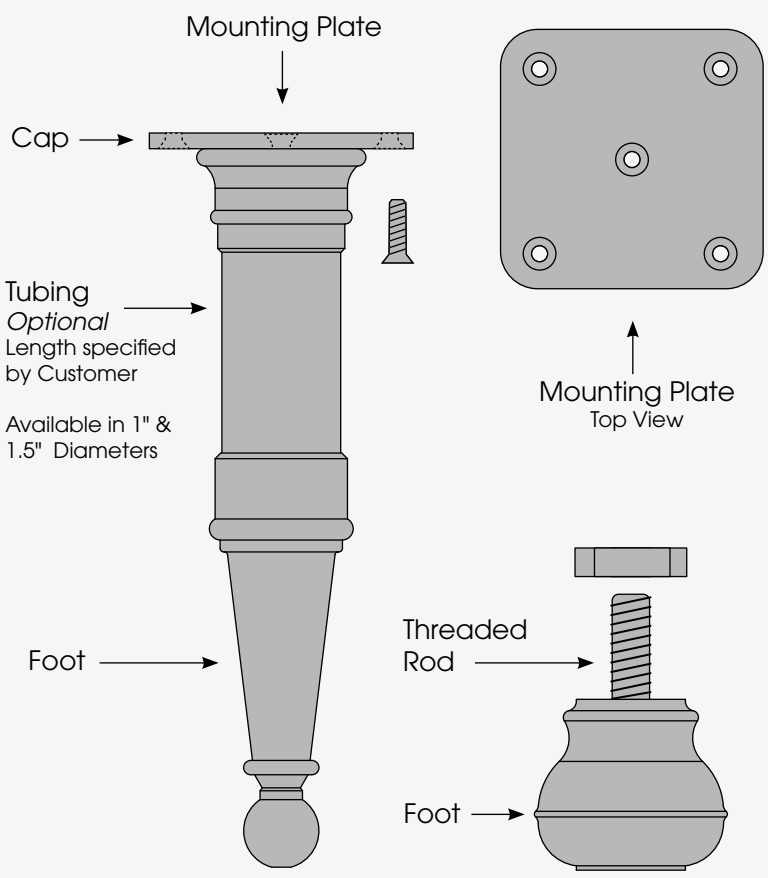

Foot & Tubing Diameter Key

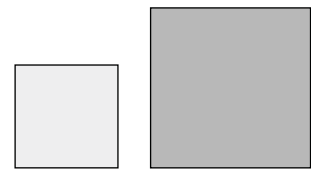

1" 1.5"

Further Options and Custom Configurations Upon Request

r073125